

WS 22A

Power Driven End Stripper

Warning! This tool is not protected against electrical shock! Always use OSHA/ANSI or other industry approved eye protection when using tools. This tool is not to be used for purposes other than intended. Read carefully and understand instructions before using this tool.

Note: This tool has been designed for end stripping 600 volt secondary cable using a power drill.



FEATURES AND BENEFITS

- Available cutting heads from 1/0 to 1000 MCM conductors (Concentric, Compressed, or Compacted)
- Strips 60 MIL to 110 MIL
- Guarded cutting blades ensure safety
- Adjustable strip stop with adjustment window allows easy setup for precise strip lengths from 1.0"(25.4mm) to 4.5"(114.3mm)
- Drill adapter fits most common 3/8"(9.5mm) drill chucks
- 3/8"(9.5mm) and 1/2"(12.7mm) square socket adapter available upon request

WS 22A

P/N

W/ 1/2" Square Socket Drive	12340-3
W/ 1/4" Hex Drive	12340-1
W/ 3/8" Drill Drive	12340
W/ 3/8" Square Socket Drive	12340-2

Operating Instructions

Note: Before stripping the cable covering, ensure that the proper cutting head (bushing) has been selected for the cable to be stripped. For best results, the cable end to be stripped should be cut with a hack saw or curved blade cable cutter. Injury or tool damage may occur with a badly deformed cable end.



Fig. 1

Step 1. (Fig. 1) Mount the tool onto power drill using the 3/8" (9.53mm) drill adapter on tool.

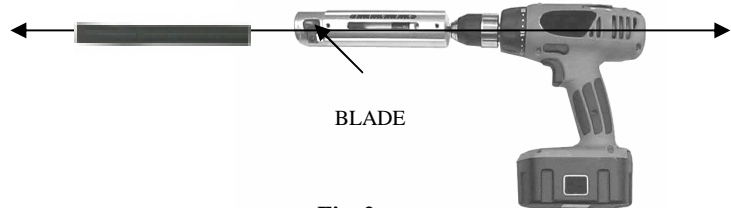


Fig. 2

Step 2. (Fig. 2) To ensure consistent and accurate removal of covering, the cable must be as straight as possible. Slide the tool onto the cable until the cable end is up against the stripping blade. Ensure that the tool is aligned properly with the cable axis.



Fig. 3

Step 3. (Fig. 3) Operate the drill at low speed and apply slight forward pressure to the tool. Continue forward pressure until the length of the strip is complete. The cable covering will be removed until the cable conductor reaches the internal stop bar. The blade will automatically sever the covering evenly at the end of the cut. **Stop drill and then remove from the cable. Do not remove tool while drill is turning.**

STOP BAR ADJUSTMENT

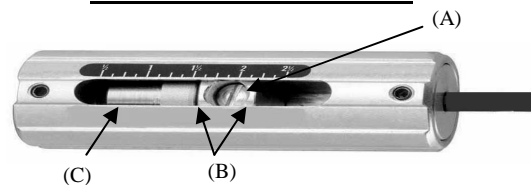


Fig. 4

To adjust the strip stop, insert a flat head screw driver into screw (A), loosen and reposition the strip stop to the length desired and then retighten screw (A). **The leading edge of the stop body (B) will be used as a strip length position indicator.** Stop body (B) should not be confused with the rotating stop face (C).

WARRANTY: The Ripley Company warrants that our line of tools are free of defect and fully operable at the time of shipment. The warranty is limited to the repair or replacement of any product which proves to be defective in material or workmanship, under normal use and service.



46 Nooks Hill Road
Cromwell, CT 06416
Phone: 800-528-8665
Int'l: (01) 860-635-2200
Fax: (01) 860-635-3631
e-mail: info@ripley-tools.com
Internet: www.ripley-tools.com

UtilityTool

37344

3/12/03 SB

rev 1